


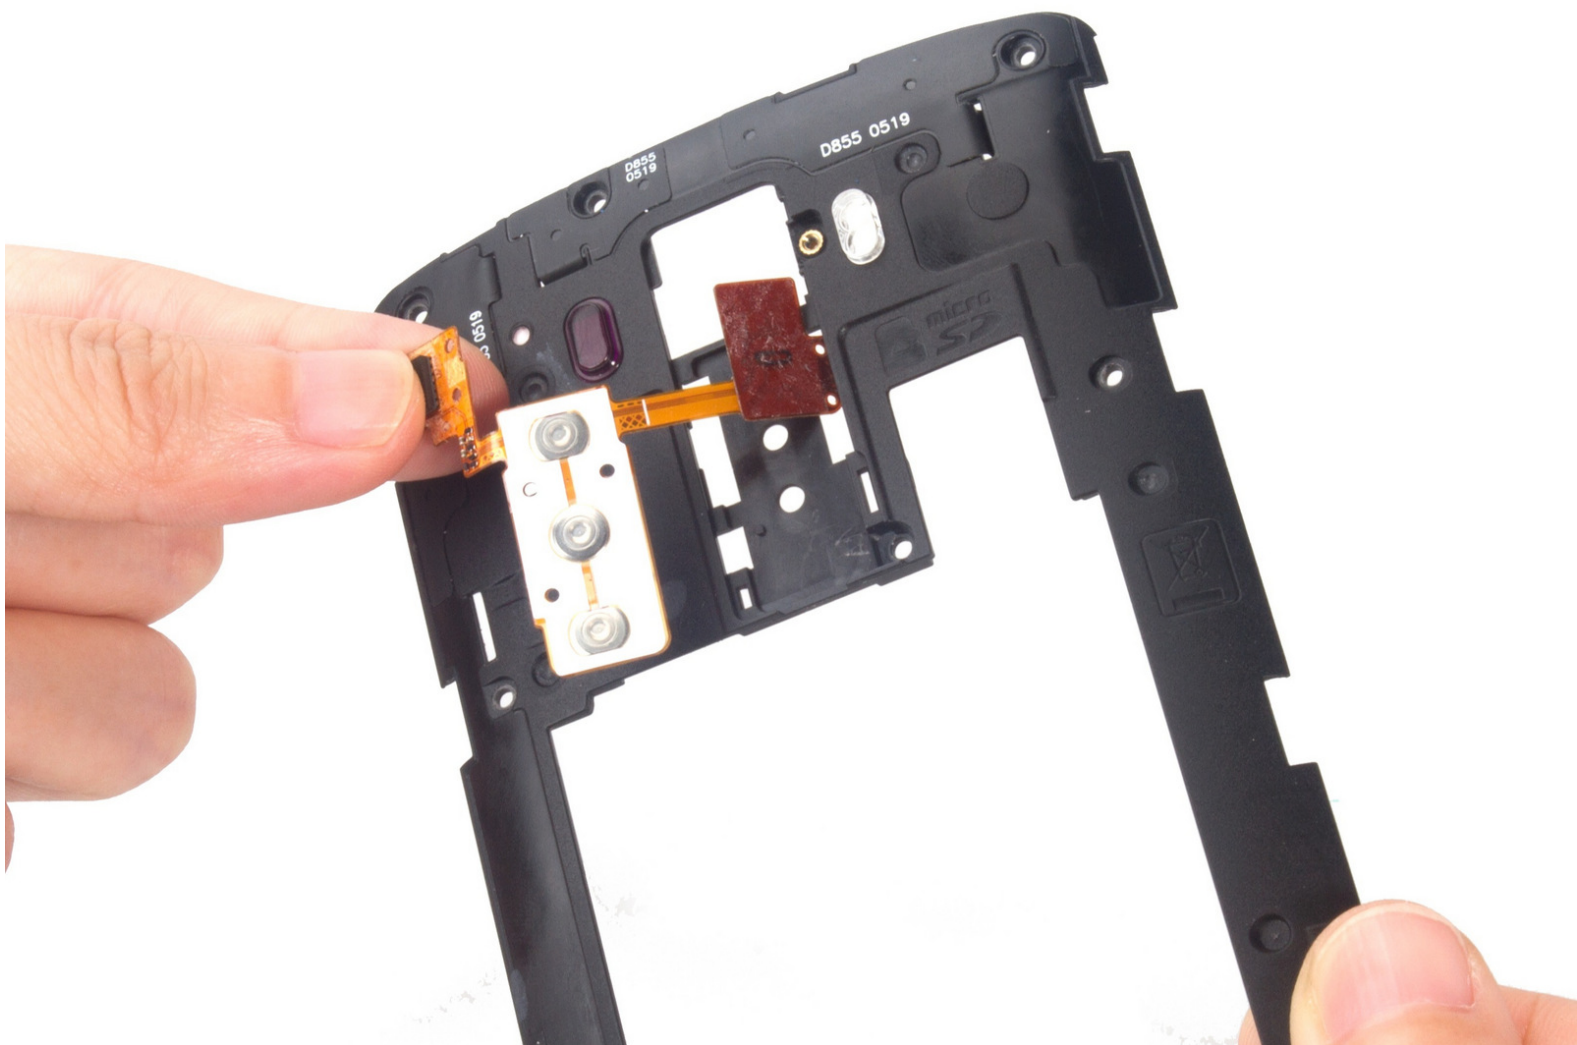

# LG G3 Power & volume button flex Replacement

In this guide you will learn how to replace the power and volume flex cables in the LG G3.

Written By: Sophia



# INTRODUCTION

In this guide you will learn how to replace the power and volume flex cables in the LG G3.

[video: <https://www.youtube.com/watch?v=fLZ-BwHQY9s>]



## TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [Spudger](#) (1)



## PARTS:

- [LG G3 Midframe \(AT T\)](#) (1)
- [LG G3 Midframe \(T-Mobile\)](#) (1)
- [LG G3 Midframe \(Sprint\)](#) (1)

## Step 1 — Power & volume button flex



- Begin by removing battery cover with fingernail starting at the little tab on the side.

## Step 2





- Remove battery.

## Step 3






- Twist off the 12 screws and remove back frame.

## Step 4

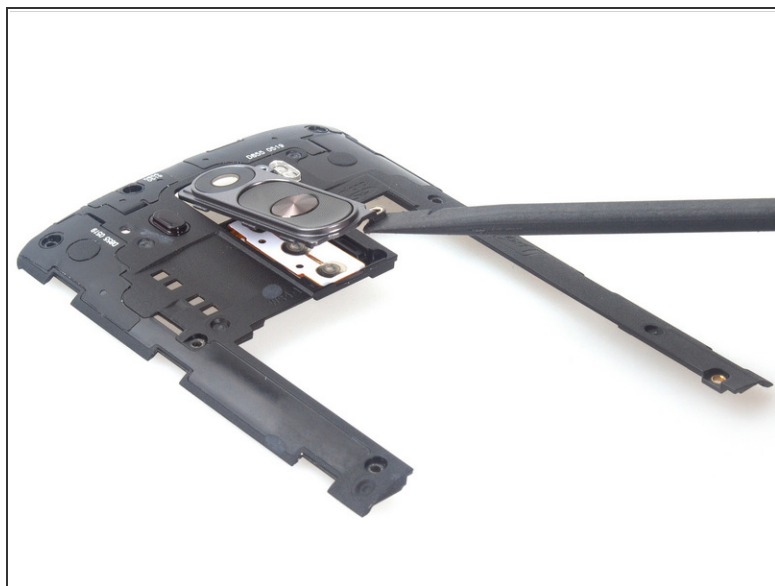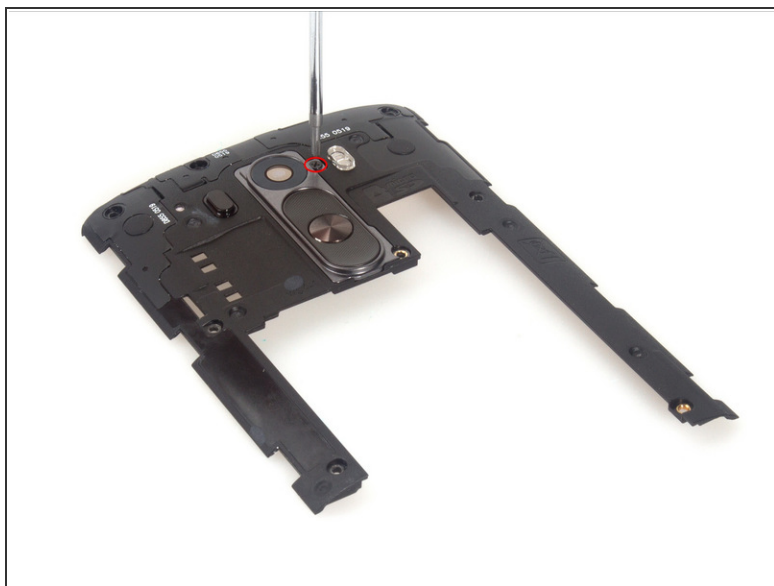


- Remove the last screw attaching the rear camera lens to the frame.
- Now use a plastic spudger to carefully remove the camera lens.

## Step 5

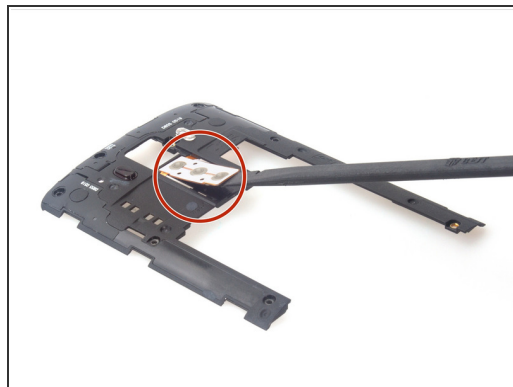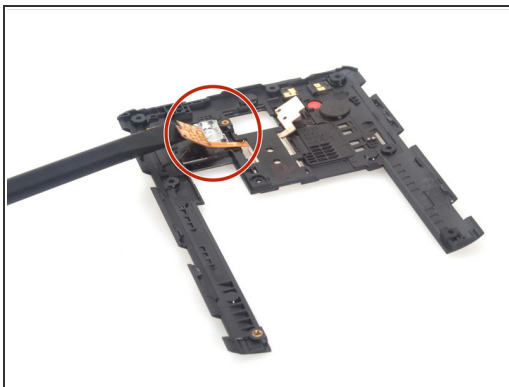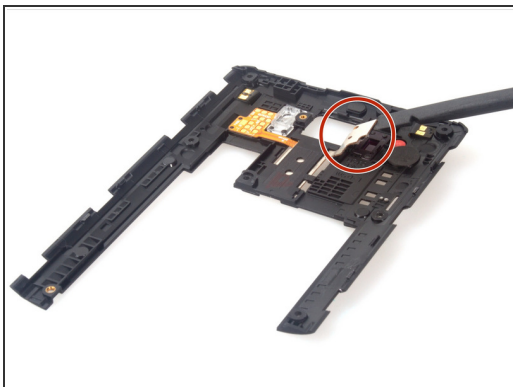

- Using the spudger, release power & volume button flex from adhesive carefully.

## Step 6

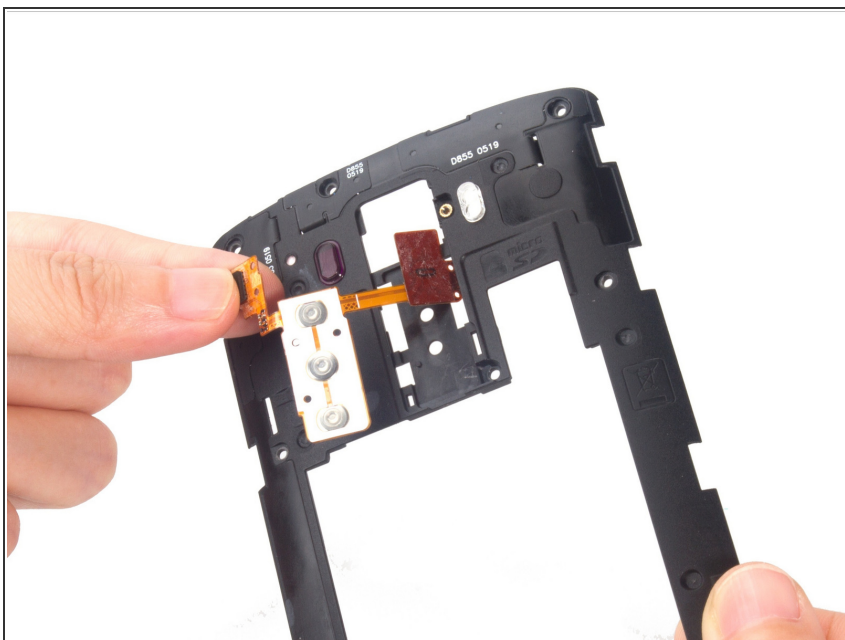

- Finally, remove the flex.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 11:59:07 PM.